

RE-ASSEMBLY FOR SPLIT
FILAMENT WOUND COLUMNS

Column will arrive split in half with tabs fastened to column with 1" grabber screws.


Separate column halves by removing 1" grabber screws from one side of seam. Back grabber screws out of the other half to allow the tabs to separate from column. Apply high quality polyester adhesive. (see Detail A) Tighten grabber screws on tabs.

Position first 1/2 section around post or support column.

Align second 1/2 section and join together with high quality polyester adhesive and screws. Strap clamps may also be useful.

After adhesive sets, (Recommended Cure Time) remove the clamp or strap and screws. Fill the seam with Bondo-like filler, sand smooth.

After sanding and removing dust, column is ready for finishing, priming and painting

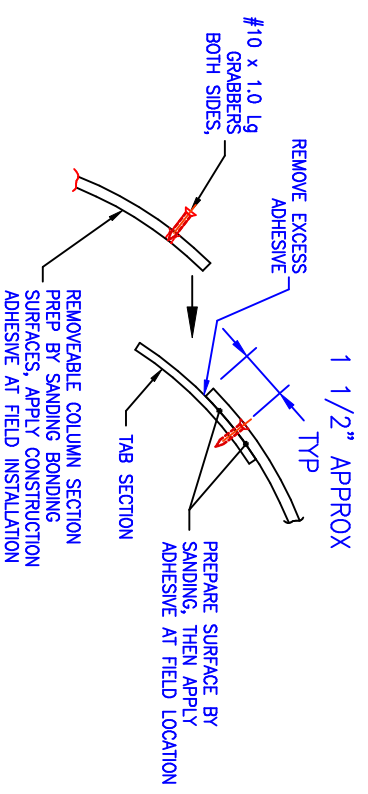

DETAIL A

DESCRIPTION	DATE	REV
REVISIONS		
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		
DECIMAL FRACTIONS	TOLERANCES	FINISH
.XXX 2/100	.0005	AS SHOWN
.XXX 2/100	.0005	1/8"
DO NOT SCALE DRAWING		
		✓
ORIGINATOR	DATE	
I. HARTLEY	02/09/05	
CHECKER		
PROJECT ENGINEER		
MANUFACTURING ENGINEER		
PROGRAM MANAGER		
TITLE First Class Building Products, Inc. Tel: 888.514.8141 Fax: 770.514.0731 website: www.firstclassbp.com		
CONTRACT NUMBER FIBERGLASS COLUMN DETAIL SPLIT & TAB FOR RE-ASSEMBLY INSTALLATION INSTRUCTIONS		
FINISH	N/A	
TREATMENT	N/A	
SIMILAR TO	N/A	
ACT WT	N/A	
CALC WT	N/A	
SCALE	NONE	
RELEASE DATE		
SHEET	1	of 1